

INSTRUCTIONS

17


Take the *Coupling Bolt Template* and align the hatched section of the template with the mark you made in step #09 that was 37 1/2" up from the bottom of the pipe. Make sure the center line on the template, marked with a *CL*, lines up with the center line on the pipe.

WHY?

The holes from this template will determine where the coupling gets attached to the rocket body. It is important that the center line on the template and the center line on the pipe line up.

WHY?

The *hatched* section of the template is the section that is filled with small parallel lines.

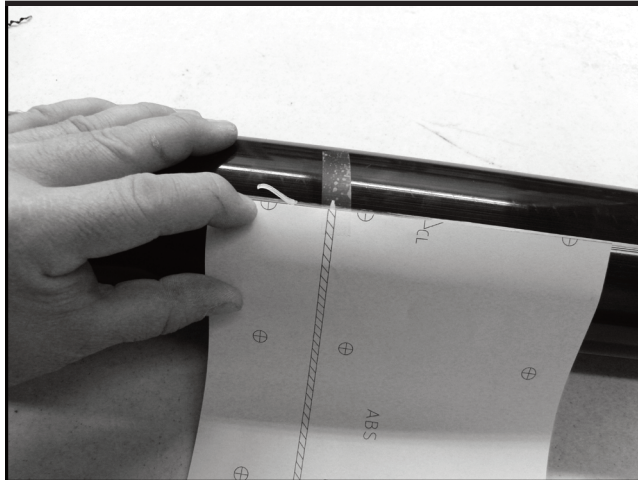

INSTRUCTIONS

18

Once the template is in position, tape the template to the pipe.

MATERIALS

Scotch tape.